


Getting to Know Your **2013 Regal**



Review this Quick Reference Guide for an overview of some important features in your Buick Regal. More detailed information can be found in your Owner Manual. Some optional equipment ♦ described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

Instrument Panel

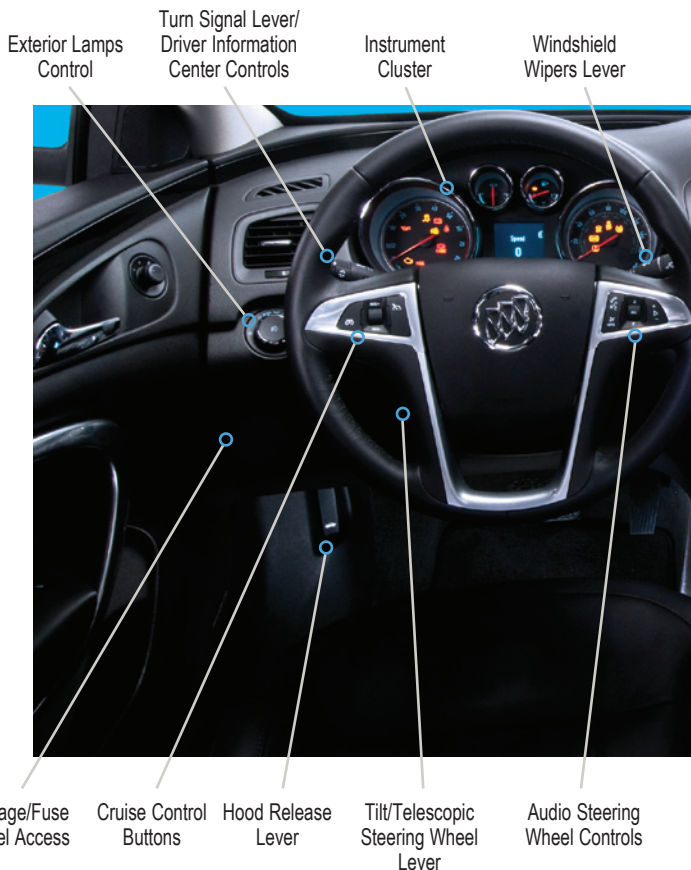

Symbols



Oil Pressure



Airbag Readiness



StabiliTrak/Traction Control Warning



Security



Charging System



Safety Belt Reminder



Brake System Warning



Parking Brake Set



Lights On



Low Tire Pressure



Antilock Brake System Warning



Check Engine



Traction Control Off



StabiliTrak/Traction Control Off



Fog Lamps



Cruise Control

Traction Control/
StabiliTrak Button

Power
Door Lock
Buttons

Hazard
Warning
Flashers
Button

Ultrasonic Rear
Parking Assist
Button ◆



Automatic Climate
Controls/Heated
Seat Buttons

Multifunction
Controller ◆

Electric Parking
Brake

Audio System/
Navigation
System ◆

Refer to your Owner Manual to learn about the information being relayed by the lights and gauges of the instrument cluster, as well as what to do to ensure safety and prevent damage to your vehicle.

See Instruments and Controls in your Owner Manual.

◆ Optional equipment

Remote Keyless Entry Transmitter

Unlock

Press once to unlock the driver's door only or press twice to unlock all doors.

Lock

Press to lock all doors. The driver's door will not lock if open.

Note: THE REMOTE LOCK AND UNLOCK SETTINGS CAN BE CHANGED IN THE VEHICLE SETTINGS MENU BY USING THE AUDIO SYSTEM CONTROLS.

Vehicle Locator/Panic Alarm


Press and release to locate your vehicle.


Press and hold for two seconds to activate the alarm. Press the button again or turn on the ignition to cancel the alarm.

Trunk Release

Press and hold to unlatch the trunk.




Remote Vehicle Start

Press and release the **Lock** button and then press and hold the  button to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the On position before driving.

- The engine will run for 10 minutes. Repeat these steps for a 10-minute time extension.
- Only two remote starts are allowed between ignition cycles.
- Press and hold the  button to cancel a remote start.

See Keys, Doors and Windows in your Owner Manual.

Power Door Locks/Door Opening

- Press the power door  **Unlock**/ **Lock** button in the center of the instrument panel to unlock or lock all doors.
- To open a locked door from the inside, pull the door handle to unlock the door and then pull the handle again to open the door.
- To prevent a rear door from opening from the inside, activate the  **Rear Door Security Lock**. See your Owner Manual for more information.

See Keys, Doors and Windows in your Owner Manual.

Express Power Windows

- All windows have an express-down feature. Fully press the desired window switch for the window to lower automatically.
- The front windows have an express-up feature. Fully pull the desired front window switch for the window to go up automatically.
- To partially open a window, gently press and hold the appropriate switch until the window reaches the desired position.

Note: IF VEHICLE BATTERY POWER IS LOST, THE WINDOWS MUST BE RE-PROGRAMMED FOR THE EXPRESS-UP FEATURE TO OPERATE. FOLLOW THE OWNER MANUAL PROCEDURE.

See Keys, Doors and Windows in your Owner Manual.

Driver's Power Seat Adjustment



A. 6-way Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. 2-way Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. 4-way Lumbar Adjustment


Press the control pad to adjust the lumbar support.

Head Restraint Adjustment



- Press the release button to raise or lower the head restraint.

Folding Rear Seats

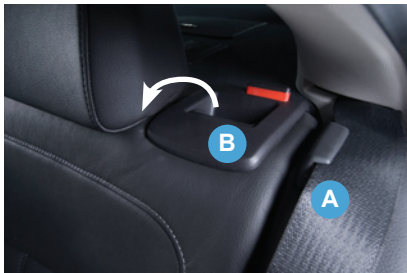

1. Place the safety belt in the retainer clip (A).
2. Pull the lever (B) on top of the seatback. When the red marking is visible, the seatback is unlatched.
3. Fold down the seatback.

See *Seats and Restraints in your Owner Manual*.

Exterior/Interior Lighting

Automatic Headlamp System



 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

Parking Lamps

Manual operation of the parking lamps.

Headlamps

Manual operation of the headlamps.

Fog Lamps ◆

Press to turn the fog lamps on or off.

Interior Lighting



Instrument Brightness Control

Rotate and hold the switch to brighten or dim the instrument panel lighting.

See Lighting in your Owner Manual.

Windshield Wipers and Washer



2 High

1 Low

 **Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is moved up.


 **Off**

 **Mist**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.

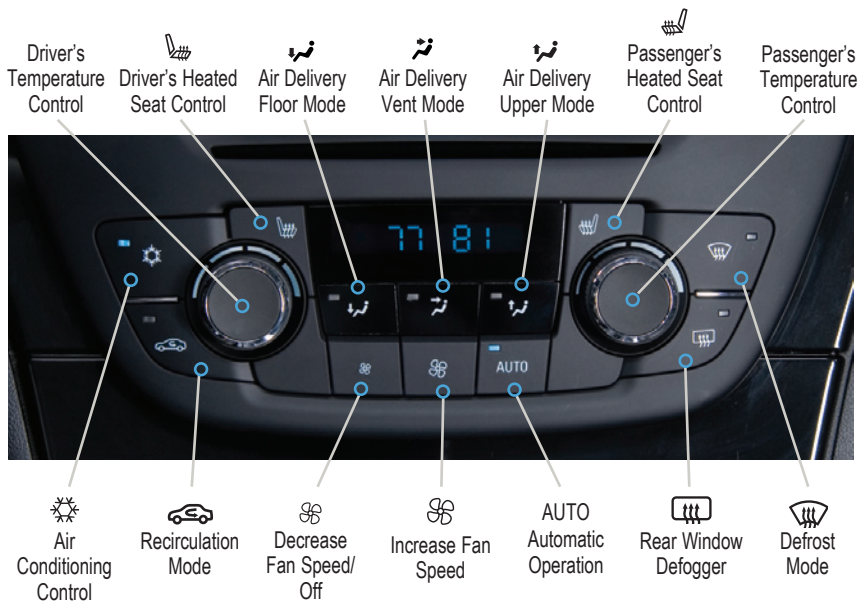

Automatic Operation

1. Press **AUTO**.
2. Set the temperature. Allow time for the system to automatically reach the desired temperature.

If the air delivery mode or fan setting is manually adjusted, automatic operation is turned off.

Note: WHEN THE RECIRCULATION MODE IS USED WITHOUT AIR CONDITIONING, THE AIR HUMIDITY INCREASES AND THE WINDOWS MAY FOG.

See *Climate Controls in your Owner Manual*.

Sunroof

The sunroof controls are located on the overhead console.

Express Open/Close

Fully press the top of the switch to express open the sunroof. Gently press and hold the switch to partially open the sunroof.

Fully press the bottom of the switch to express close the sunroof. Gently press and hold the switch to partially close the sunroof.

Tilt/Close


Press the top of the switch to tilt the sunroof.

Press the bottom of the switch to close the sunroof.

See *Keys, Doors and Windows in your Manual*.

IntelliLink System

Buick IntelliLink uses a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod™ to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet through a smartphone, and features enhanced hands-free voice control, music information and the ability to display photos and play music files from a USB flash drive.

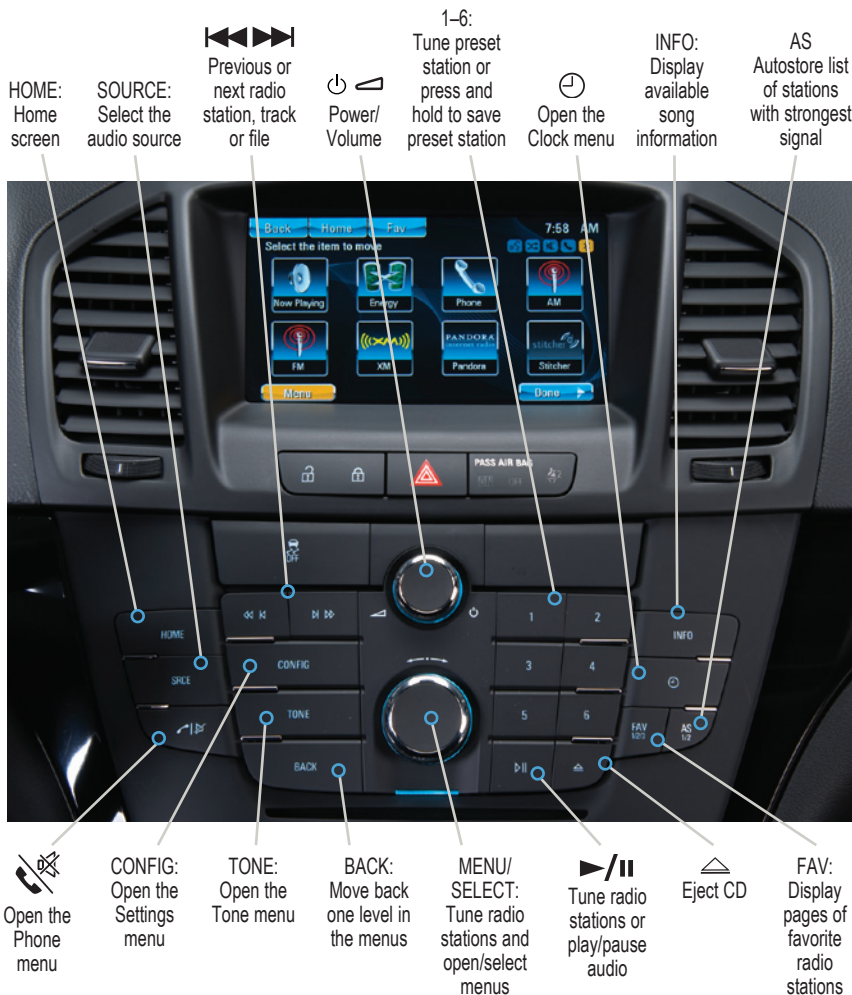

For additional information, see your Infotainment System Owner Manual.

Bluetooth® System

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the IntelliLink system. Not all devices will support all functions. Bluetooth streaming audio is available with the IntelliLink system. For more information, visit www.gm.com/bluetooth.

Pair a Phone using Voice Recognition

1. Press the **Voice Recognition** button.
2. After the beep, say "Pair." The system will search for your phone. A four-digit code appears on the display.
3. Start the pairing process on the phone. Locate your vehicle name on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.



Pair a Phone using the Screen Buttons

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Pair Device**. A four-digit code appears on the display.
5. Start the pairing process on the phone. Locate your vehicle name on the phone.
6. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
7. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

USB Connectivity




An iPod™, iPhone™, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. IntelliLink will read the device, build a list of voice commands, and fill in missing song information and album graphics. You can search your music on-screen or by voice commands.

Note: Connect an iPod/iPhone USB cord after starting the vehicle for optimum performance.

For additional information, see your Infotainment System Owner Manual.

Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the enhanced voice recognition system.

1. Press the  **Voice Recognition** button on the steering wheel.
2. The radio will say "Please say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Phone (Using your paired phone):**

- "Pair" or "Connect"
- "Dial" or "Call [number]"
- "Dial" or "Call [phone book name]"

Example command: "Call Amanda" or "Dial 555-1212"

- **Media Music Device Search:**

- "Play CD"
- "Play USB"
- "Play Bluetooth audio"

Example command: "Play artist [name]"

Example command: "Play song 'Dance the Night Away'"

- **Radio Control:**

Example command: "Tune FM 104.3" or "Tune Classic Vinyl"

Example command: "Tune Pandora" (Pandora app required)

Example command: "Thumbs up" or "Thumbs down" (Pandora app required)


- **Quick Tips:**

- Say "Help" for voice recognition assistance.
- To start speaking immediately without waiting for the beep, press the **Voice Recognition** button twice.

Device List

To switch devices, select from the list of paired phones/devices.

Listing all Paired Phones using Voice Recognition

1. Press the  **Voice Recognition** button.
2. Say "Device list" or "Select device."

Listing all Paired Phones using the Screen Buttons

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Device List**.

For additional information, see your Infotainment System Owner Manual.

Note: ALWAYS VERIFY THAT YOUR PHONE HAS THE LATEST VERSION OF AN APPLICATION AND THAT THE PHONE VOLUME IS TURNED UP.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres (a slight delay may occur when loading a song or changing a station).



- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ If you like a song, you can say “Thumbs up” using voice recognition, or touch the **Thumbs Up** screen button.
- ▶ Use voice commands to tune to your Pandora stations.

Stitcher™ SmartRadio

Stream favorite podcasts, radio shows and news to your vehicle.

- ▶ Download the Stitcher app to your smartphone. Restart the smartphone and sign in to Stitcher.
- ▶ Select a category to listen to.
- ▶ If you like the station, touch the **Star** screen button to add it to your favorites list.

Note: BlackBerry® phones are not supported for this application.

Gracenote® Behind the Scenes

Gracenote is technology embedded in the IntelliLink system to help you better manage and navigate your music collection. With your portable audio device connected to the IntelliLink system, Gracenote identifies your music collection and displays the artist and album name and genre as well as the cover art. Gracenote also will fill in missing information.

SiriusXM™ Satellite Radio

NEW – XM Travel Link includes fuel locations and prices, weather, and movies with theater locations. Additional subscription fee required.

NEW – XM Tune Select finds your favorite artists or songs on all XM stations and alerts you.

With SiriusXM, you have access to over 180 channels of commercial-free music, sports, talk, entertainment, comedy and weather using the radio controls or voice commands. A SiriusXM subscription is required.

For assistance with Bluetooth pairing, application downloading and installation, mobile device compatibility, and operation of the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (855-478-7767) or visit www.buick.com/intellilink.

For additional information, see your Infotainment System Owner Manual.

Navigation System ◆

Note: AVOID EXTENDED SEARCHING FOR ITEMS OR CONFIGURING SETTINGS WHILE DRIVING.

- SRCE:** FM, AM, XM, CD, AUX
- HOME:** Main menu
- Previous or next radio station, track or file** (represented by double left and right arrows)
- MENU/SELECT:** Turn outer chrome ring to change radio stations or highlight menu items; press outer chrome ring to select item
- Power/Volume** (represented by a power button icon)
- 1-6:** Tune preset station or press and hold to save preset station
- CONFIG:** System settings menu
- TONE:** Sound settings menu
- INFO:** Display available song/navigation information



Phone menu/
Mute

NAV: Map screen

DEST: Destination or Route screen

RPT: Repeat voice guidance

BACK: Move back one level in the menus



Eject disc

Clock menu (represented by a clock icon)

FAV: Pages of favorite radio stations

AS: Autostore list of stations with strongest signal

For additional information, see your Infotainment System Owner Manual.

Note: WHEN THE VEHICLE IS MOVING, VARIOUS ON-SCREEN FUNCTIONS ARE DISABLED TO REDUCE DRIVER DISTRACTION.

The navigation system includes the features of the IntelliLink system and the touch screen infotainment display.

To select various system functions, touch the highlighted touch screen buttons in the on-screen menus or use the **MENU/SELECT** knob.



Entering a Destination

1. Press the **DEST** button.
2. Touch the **Address Entry** screen button to enter a specific address. The Destination Entry menu also lists other options to plan a route.
3. Select State/Province, City or Street and enter the information. Touch the **List** button to select the desired name from the generated list for each entry.
4. Enter the house number. Touch the **Done** screen button.
5. The entered address is displayed.
6. Select the Route Options and touch the **Start Guidance** screen button.

For additional information, see your Infotainment System Owner Manual.

Clock

Setting the Time

1. Turn on the radio.
2. Press the **Clock** button.
3. Use the screen buttons to adjust the time, date and day settings.
4. The new time settings will be displayed after exiting the screen.

See Instruments and Controls in your Owner Manual.

Audio/Bluetooth® Steering Wheel Controls



Next/Previous

Rotate up or down to go to the next or previous favorite radio station, CD track or MP3 file.

SRC Source

Press to select an audio source.

Push to Talk

Press to start voice recognition. Say phone, OnStar, radio, Bluetooth or navigation. ◆

End Call/Mute

Press to end or reject an OnStar or a Bluetooth call.

Press to mute the vehicle speakers.

+ ▸ - Volume

Press + or - to increase or decrease the volume.

See Infotainment System in your Owner Manual.

Vehicle Personalization

Some vehicle features can be customized using the audio system controls and menus.



1. Press the **CONFIG** button to view the Configuration Settings menu.
2. Use the touch screen buttons or turn the **Multifunction** knob or **MENU/SELECT** knob to highlight the Vehicle Settings menu; press the knob or outer chrome ring to select it.
3. Use the touch screen buttons or turn the **Multifunction** knob or **MENU/SELECT** knob to highlight the desired menu option; press the knob or outer chrome ring to select it.
4. Press the **BACK** button to exit each menu.

See Instruments and Controls in your Owner Manual.

Interactive Drive Control System ♦

The Interactive Drive Control System adapts to your driving style and preference within one of three driving modes. It automatically adjusts suspension, steering and automatic transmission settings in real time. System controls are located on the center of the instrument panel.

STANDARD (Default)

Use for normal city and highway driving; is active each time the vehicle is started.

TOUR (Not on GS model)

Press the **TOUR** button for a smooth ride during long-distance highway driving.

SPORT

Press the **SPORT** button when road conditions or personal preference demand more responsive, controlled handling. The Sport mode settings (not on GS model) can be changed in the Vehicle Settings menu by using the audio system controls.

GS (GS model only)

Press the **GS** button for the highest level of responsiveness and controlled handling. The instrument panel backlighting color changes from Ice Blue to White.

See Driving and Operating in your Owner Manual.

Multifunction Controller ♦



NAV

View the navigation map screen.

AUDIO

Access audio system features.

PHONE

Access phone features.

DEST

Access the navigation destination or route screen.

BACK

Move back one level in the menu.

- Press the appropriate button to access the desired menu or function.
- Turn the controller to highlight the desired option.
- Press the controller to select the option.

See Infotainment System in your Owner Manual.

Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays vehicle system information and warning messages and is accessed using the controls on the turn signal lever.

DIC Controls



A. MENU

Press to display the:

- **Trip/Fuel menu** (digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average speed, timer, OnStar Turn-by-Turn guidance).
- **Vehicle Information menu** (units, tire pressures, remaining oil life, compass, speed warning).

B. Δ / ∇

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set or clear a menu item or warning message. Some urgent messages cannot be cleared from the DIC display.

See Instruments and Controls in your Owner Manual.

Cruise Control



Adjusting Cruise Control

RES/+ Resume/Accelerate

Rotate the switch up to resume a set speed.

When the system is active, rotate the switch up to increase speed.

SET/- Set/Coast

When the system is active, rotate the switch down to decrease speed.

Cancel




Press to cancel the cruise control but retain the set speed in memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

See Driving and Operating in your Owner Manual.

Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white in the instrument cluster.
2. When traveling at the desired speed (must be above 25 mph), rotate the **SET/-** switch down to set the speed. The  **Cruise Control** symbol will illuminate in green in the instrument cluster.

Driver Shift Control

Driver Shift Control (DSC) allows the driver to shift gears manually. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

- Move the shift lever to the left of the Drive (D) position. Tap the shift lever forward (+) to upshift or rearward to downshift (-). The currently selected gear will be displayed in the Driver Information Center.




If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically downshift.

See Driving and Operating in your Owner Manual.

StabiliTrak®/Traction Control Systems



The full-time, full-function traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turning the Systems Off/On

- To turn off traction control, press the  **StabiliTrak/Traction Control** button on the center of the instrument panel. The  **Traction Control Off** light will illuminate in the instrument cluster.
- To turn off both traction control and StabiliTrak, press and hold the button. The  **StabiliTrak Off** light will illuminate in the instrument cluster.
- Press the button again to turn on both systems.

See Driving and Operating in your Owner Manual.

Electric Parking Brake

- To apply the parking brake, pull up the  **Parking Brake** switch by the shift lever.
- To release the parking brake, turn on the ignition, press the brake pedal and press the  **Parking Brake** switch.

See Driving and Operating in your Owner Manual.

Ultrasonic Rear Parking Assist◆

Detected objects are indicated by audible beeps when the vehicle is in Reverse. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- To turn the system on/off, press the  **Parking Assist** button on the center of the instrument panel.

Note: THE SYSTEM MAY BE DISABLED IF DIRT, SNOW OR ICE BUILDS UP ON THE SENSORS. KEEP THE VEHICLE CLEAN FOR PROPER OPERATION.

See Driving and Operating in your Owner Manual.

eAssist Overview *(if equipped)*

A compact electric drive system called eAssist has been integrated with the highly efficient 2.4-liter four-cylinder engine and six-speed automatic transmission to provide an electric “boost” to help conserve fuel. eAssist includes a small, but powerful, electric motor rated at 15 kilowatts. It replaces the typical alternator found on most engines. eAssist also uses a small, advanced 115-volt lithium-ion battery located in the trunk.

eAssist Features

Your Regal with eAssist has several features that increase vehicle efficiency and maximize fuel economy.

When braking or coasting, the electric motor acts like a generator to charge the high-voltage battery. This “regenerative braking” process captures kinetic energy that would otherwise be lost and stores it in the high-voltage battery. This electrical energy can then be reused.

Note: THE REGENERATIVE BRAKING PROCESS REQUIRES UNIQUE TRANSMISSION SHIFTING AS THE VEHICLE SLOWS DOWN.

When the vehicle comes to a stop, the engine may turn off automatically, saving fuel that would otherwise be used while idling. This is called an Auto Stop. The vehicle is powered by the high-voltage battery.

Note: THE eASSIST FEATURES OF THE VEHICLE ARE ENABLED AFTER THE ENGINE REACHES OPERATING TEMPERATURE.

Auto Start/Stop

While driving, when the brake is applied and the vehicle comes to a complete stop, the automatic engine start/stop system may turn off the engine, referred to as an Auto Stop. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will be powered by the high-voltage battery. The engine will restart immediately when the brake pedal is released or the accelerator pedal is applied.

After parking the vehicle and turning off the engine using the key or **START/STOP** button◆, the tachometer gauge will read OFF.

Auto Start/Stop Conditions

There are several conditions that may cause the engine to remain running or restart when the vehicle is stopped.

- The engine, transmission or high voltage battery is not warmed up.
- The outside temperature is less than -4°F (-20°C).
- The shift lever is in any gear other than Drive (D).
- The high-voltage battery state of charge is low.
- The climate control system requires the engine to run based on the climate control or defog setting. Using the eco Air Conditioning mode will result in more frequent and longer Auto Stops than the Comfort Air Conditioning mode.
- The Auto Stop time is greater than two minutes.

See Driving and Operating in your Owner Manual.

Power Flow Display

The Power Flow display, located on the instrument panel's Driver Information Center or on the audio system color display (if equipped), indicates the energy flow direction, the high-voltage battery charge level, and the current eAssist operating mode. These modes include:

- Engine Idle – The vehicle is stopped and the engine is running.
- Auto Stop – The vehicle is stopped, the engine has been automatically turned off and is ready to automatically restart when needed.
- Engine Power – The engine is providing the primary drive power for the vehicle.
- Hybrid Power – The eAssist electric motor is providing significant electrical assist to the engine.
- Battery Charging – The eAssist electric motor is charging the high-voltage battery while the vehicle is slowing down.





See Instruments and Controls in your Owner Manual.

Driver Efficiency Gauge

The efficiency gauge assists you in driving efficiently. To maximize efficiency, attempt to keep the pointer in the solid green zone in the middle of the gauge. The gauge moves to the left when braking and to the right when accelerating. When either is done aggressively, it is less efficient and the gauge will move farther away from the center. The eAssist system's ability to capture energy while the vehicle is slowing down makes decelerating very important for efficiency.

See Instruments and Controls in your Owner Manual.

Climate Control Settings

- Press the  **Air Conditioning** button until the button indicator is green to select the eco air conditioning setting for maximum efficiency. This setting will maximize the frequency and duration of Auto Stops while still providing cabin comfort when the vehicle is in an Auto Stop.
- Press the  **Air Conditioning** button until the button indicator is blue to select the comfort air conditioning setting for maximum cabin comfort. Auto Stops will be reduced in both frequency and duration.

See Climate Controls in your Owner Manual.

Roadside Assistance

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, your vehicle is automatically enrolled in the Buick Roadside Assistance program for 6 years/70,000 miles at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer.

Roadside Assistance and OnStar

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

myBuick and OnStar® Mobile Apps



The myBuick and OnStar Remotelink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

Buick Owner Center

The Buick Owner Center, a complimentary service for Buick owners, is a one-stop resource designed to enhance your Buick ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual and special privileges.

Sign up today at **my.buick.com**.

Always demand genuine GM Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2012 General Motors. All rights reserved.



22822966 A